

## Function and Operation


1. Press the button to adjust the height of the armrest, loosen the button to stop the armrest on the current position.



2. By turning the knob, the armrests can be adjusted outward to achieve different seat widths.




3. Pull the backrest upward to adjust the height of the backrest. The backrest will return to its initial position when pulled up to the highest position.

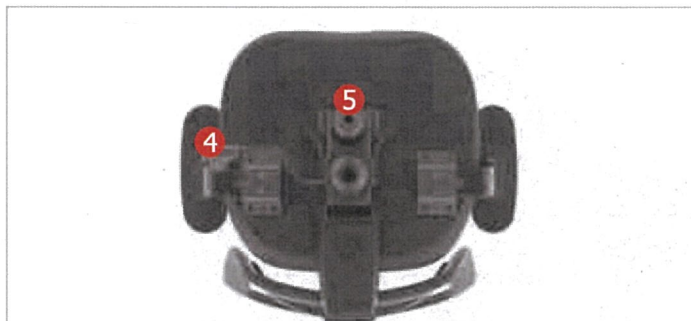

4. Pull the handle to adjust the height of the seat cushion.  
Pull the handle to adjust the back tilt.

5. Turn the knob to adjust the strength of the tilting according to the user's weight.

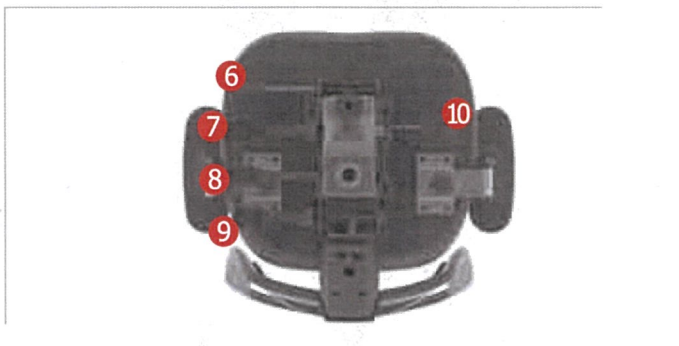

6. Lever for seat angle adjustment (-1.5 deg. to 2.5 deg.)

7. Lever for tilting / locking of seat at certain degree.

8. Pull the handle to adjust the height of the seat cushion.

9. Pull the handle to adjust tilting angle and lock the tilting mechanism.

10. Pull the handle to adjust the seat forward and backward.

---