

Info Sheet for the Agile Personal Portable Electric Height Adjustable Desk

1. Rechargeable battery version - for best results, charge the battery for at least 4 hours before using. The pilot light will go from orange to green when the battery is charged.
2. When the display goes blank Press 'S' and 'Padlock' at the same time, the digital screen will appear.
3. When setting the memory sitting and standing functions - raise the desk to the height you want first, then press 'S' until the height flashes. Then press 'S' again until the height number appears, then one more final press and the height will flash. Then press the seating or standing position. That height will now be saved.
4. If the pre-drilled holes for the motor and battery pack are not correct, screw in where suits - see image below.

If you have any issues, please call us on 07 3821 1662

